


# Classic Gold Center Channel Dispersion Control Lens Alignment

TB, BP 4/24/00

This document will explain the Dispersion Control Lens (DCL) tilting mechanism built into the InRoom Classic Gold Center Channel. This mechanism adjusts the DCL from zero to -12 degrees, angled downward to the listening position.

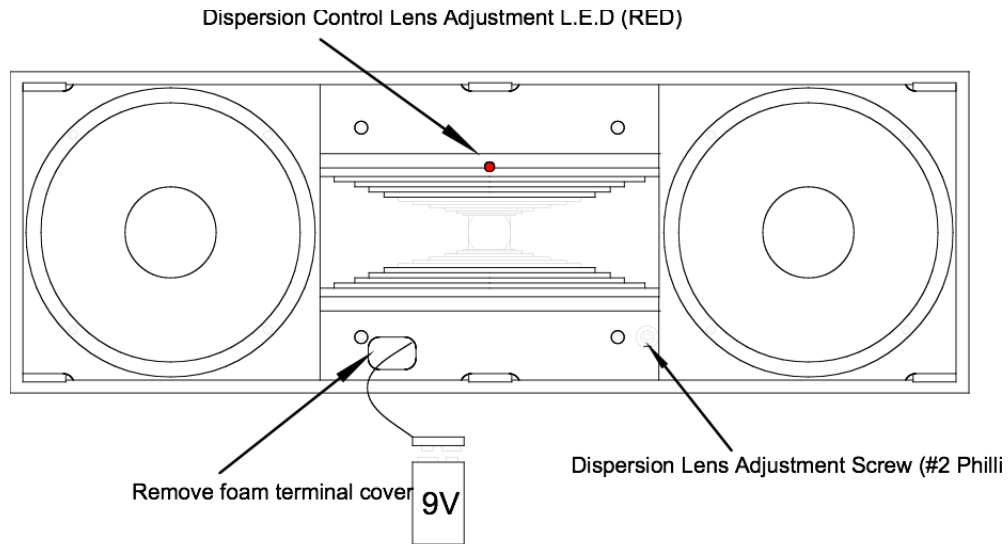

- 1) Place the Center Channel in the desired location.
- 2) Remove the oval piece of soft foam, that is covering the 9v battery terminal connector, and attach a 9v battery.
- 3) Once the battery is connected, locate the bright red LED at the top center of the DCL.
- 4) Locate the DCL adjustment screw below, and to the right, of the DCL (#2 Phillips).
- 5) When sitting in the listening position, you should be able to see the red light. If not, turn the adjustment screw until you see the red light. (Note: If more downward angle is needed, place the larger black feet under the rear of the enclosure.)
- 6) Once the DCL is correctly aimed, remove the battery and push the connector back into the enclosure, covering the opening with the soft foam piece removed in step #2.

